

# Home Decorators


Collection

HDC# 08050 MFG# TW-18404IY  
SOUTHPORT COFFEE TABLE 18"Hx42"W x24"D

## ASSEMBLY INSTRUCTIONS

**Note:** Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.



Made In China

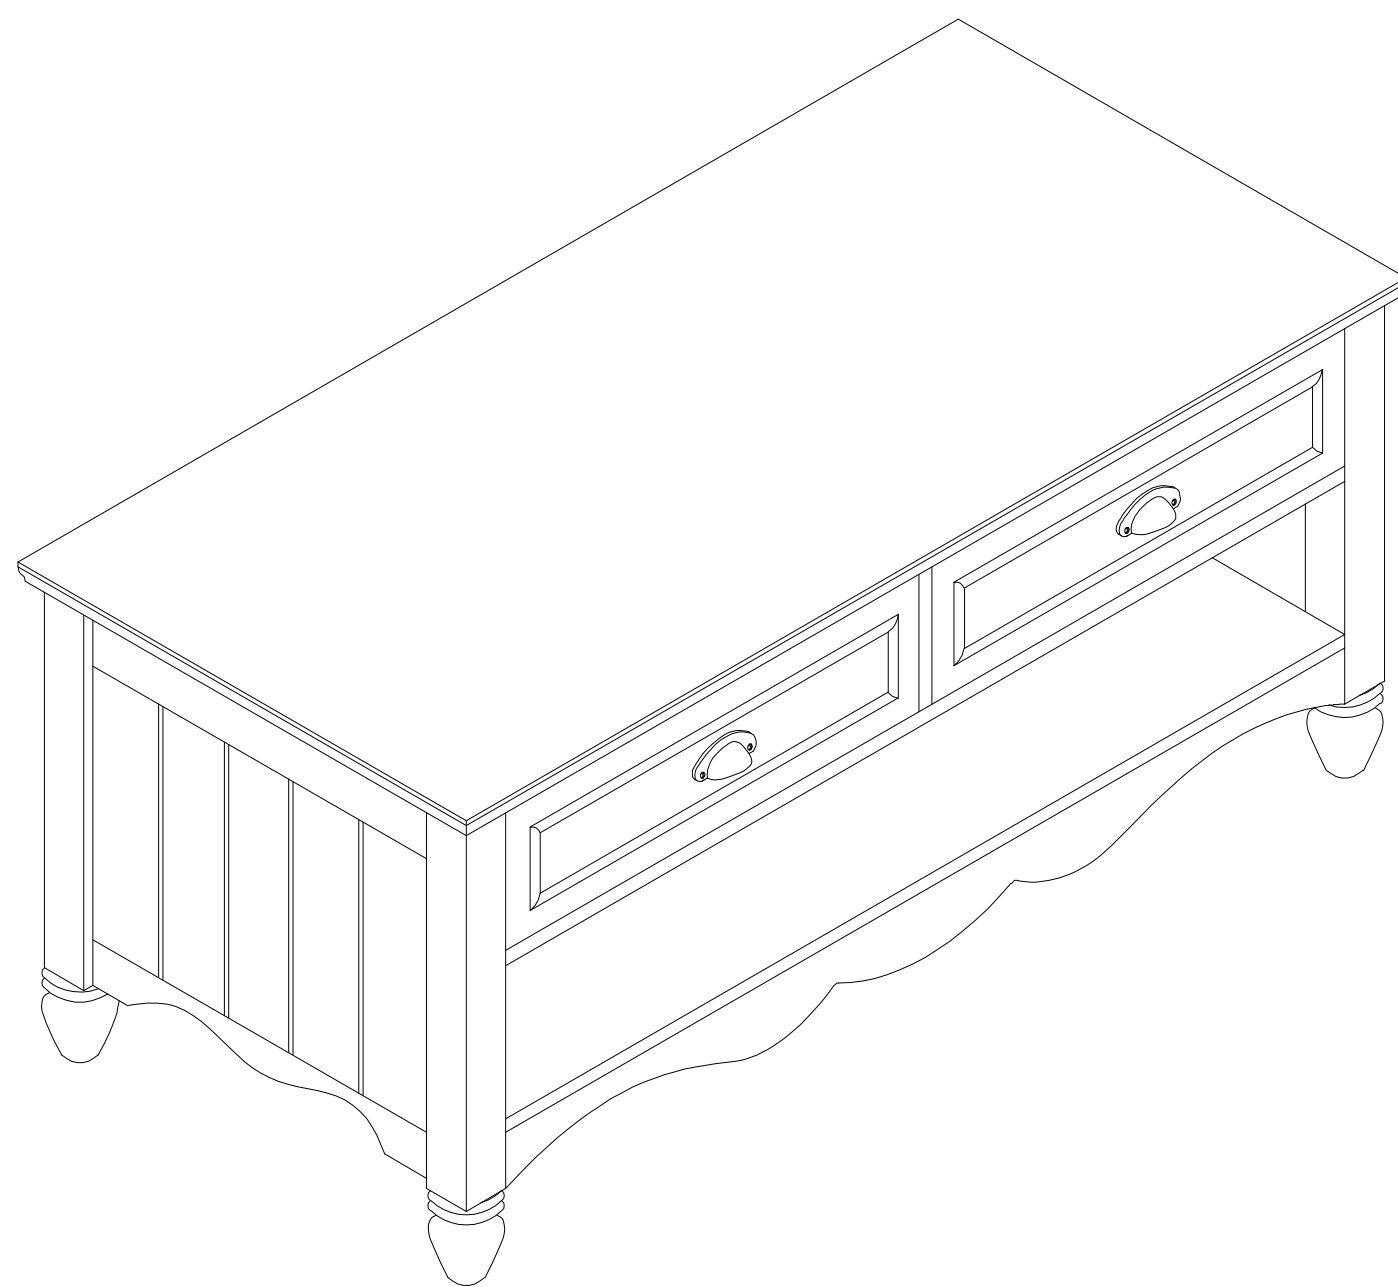



# BEFORE ASSEMBLY

**IMPORTANT NOTE:** READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.


## ASSEMBLY TOOLS REQUIRED

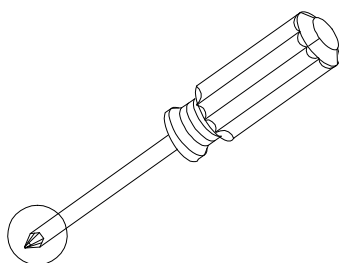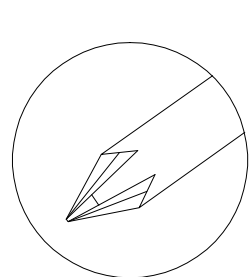


"+"Screw driver

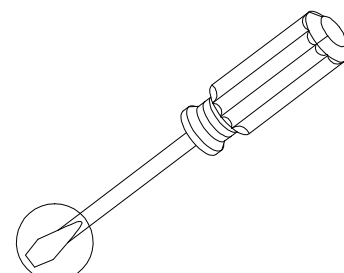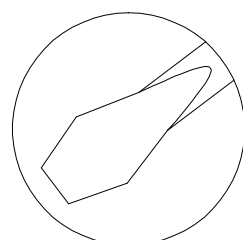

"-"Screw driver

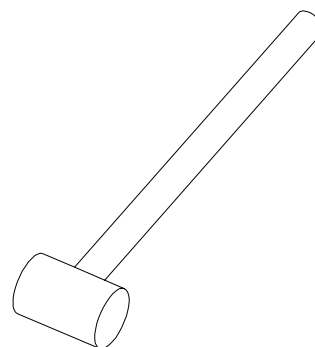


Rubber Mallet

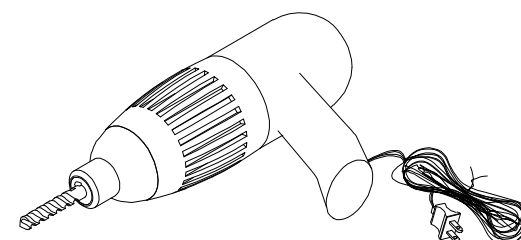






Electric drill

## WOODEN DOWEL INSTALLATION PROCEDURE





- (1) FILL HOLE 1/4 FULL OF GLUE.
- (2) GENTLY TAP DOWEL INTO HOLE WITH RUBBER MALLET OR USE HAND PRESS IN.  
DO NOT USE HAMMER
- (3) WIPE AWAY EXCESS GLUE.

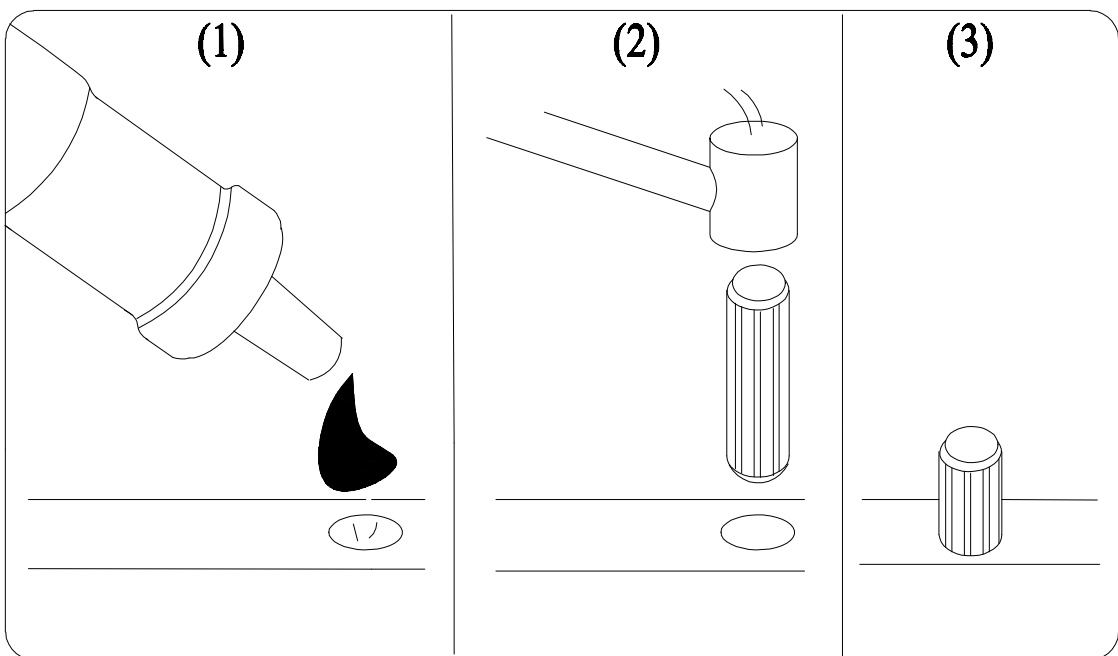

## PARTS LIST

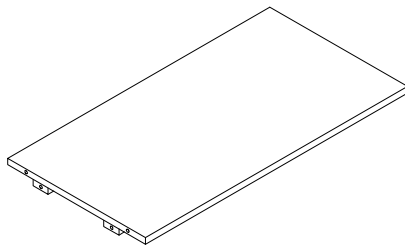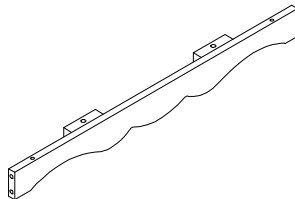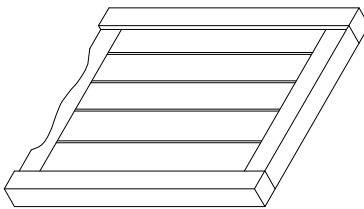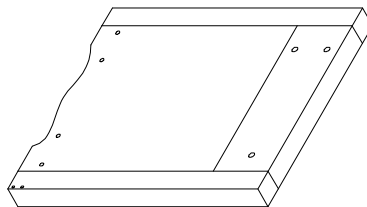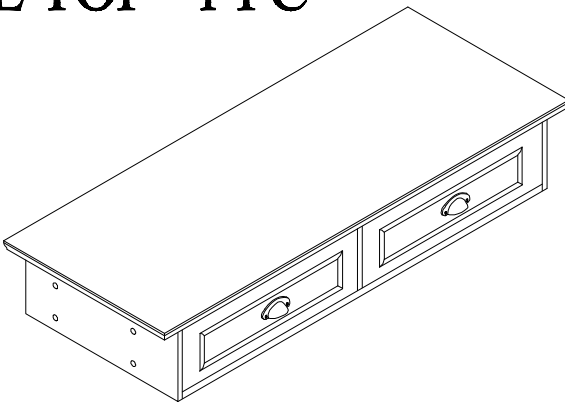
<div><div>BOTTOM PANEL 1 PC</div><div></div><div>A</div></div>	<div><div>ACROSS PANEL 2 PCS</div><div></div><div>B</div></div>	<div><div>LEFT SIDE FRAME 1 PC</div><div></div><div>C</div></div>
<div><div>RIGHT SIDE FRAME 1 PC</div><div></div><div>D</div></div>	<div><div>TABLE TOP 1 PC</div><div></div><div>E</div></div>	

# HARDWARE LIST
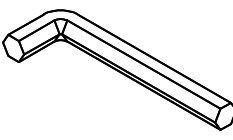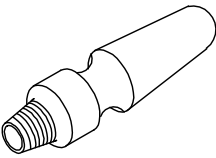
<b>WOOD DOWEL</b> 16 PCS  (1)	<b>ROUND HEAD BOLT</b> <b>FLAT WASHER</b> 16 SETS  (2)	<b>ALLEN KEY</b> 1 PC  (3)	<b>GLUE</b> 1 PC  (4)
---	--	--	---


**STEP 1: ASSEMBLE ACROSS PANEL (B) ON BOTTOM PANEL (A)**

- FILL RELEVANT HOLES OF BOTTOM PANEL (A) 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2)
- USE ROUND HEAD BOLT & FLAT WASHER (2) TO ATTACH ACROSS PANEL (B) AND BOTTOM PANEL (A) TOGETHER BY ALLEN KEY (3).

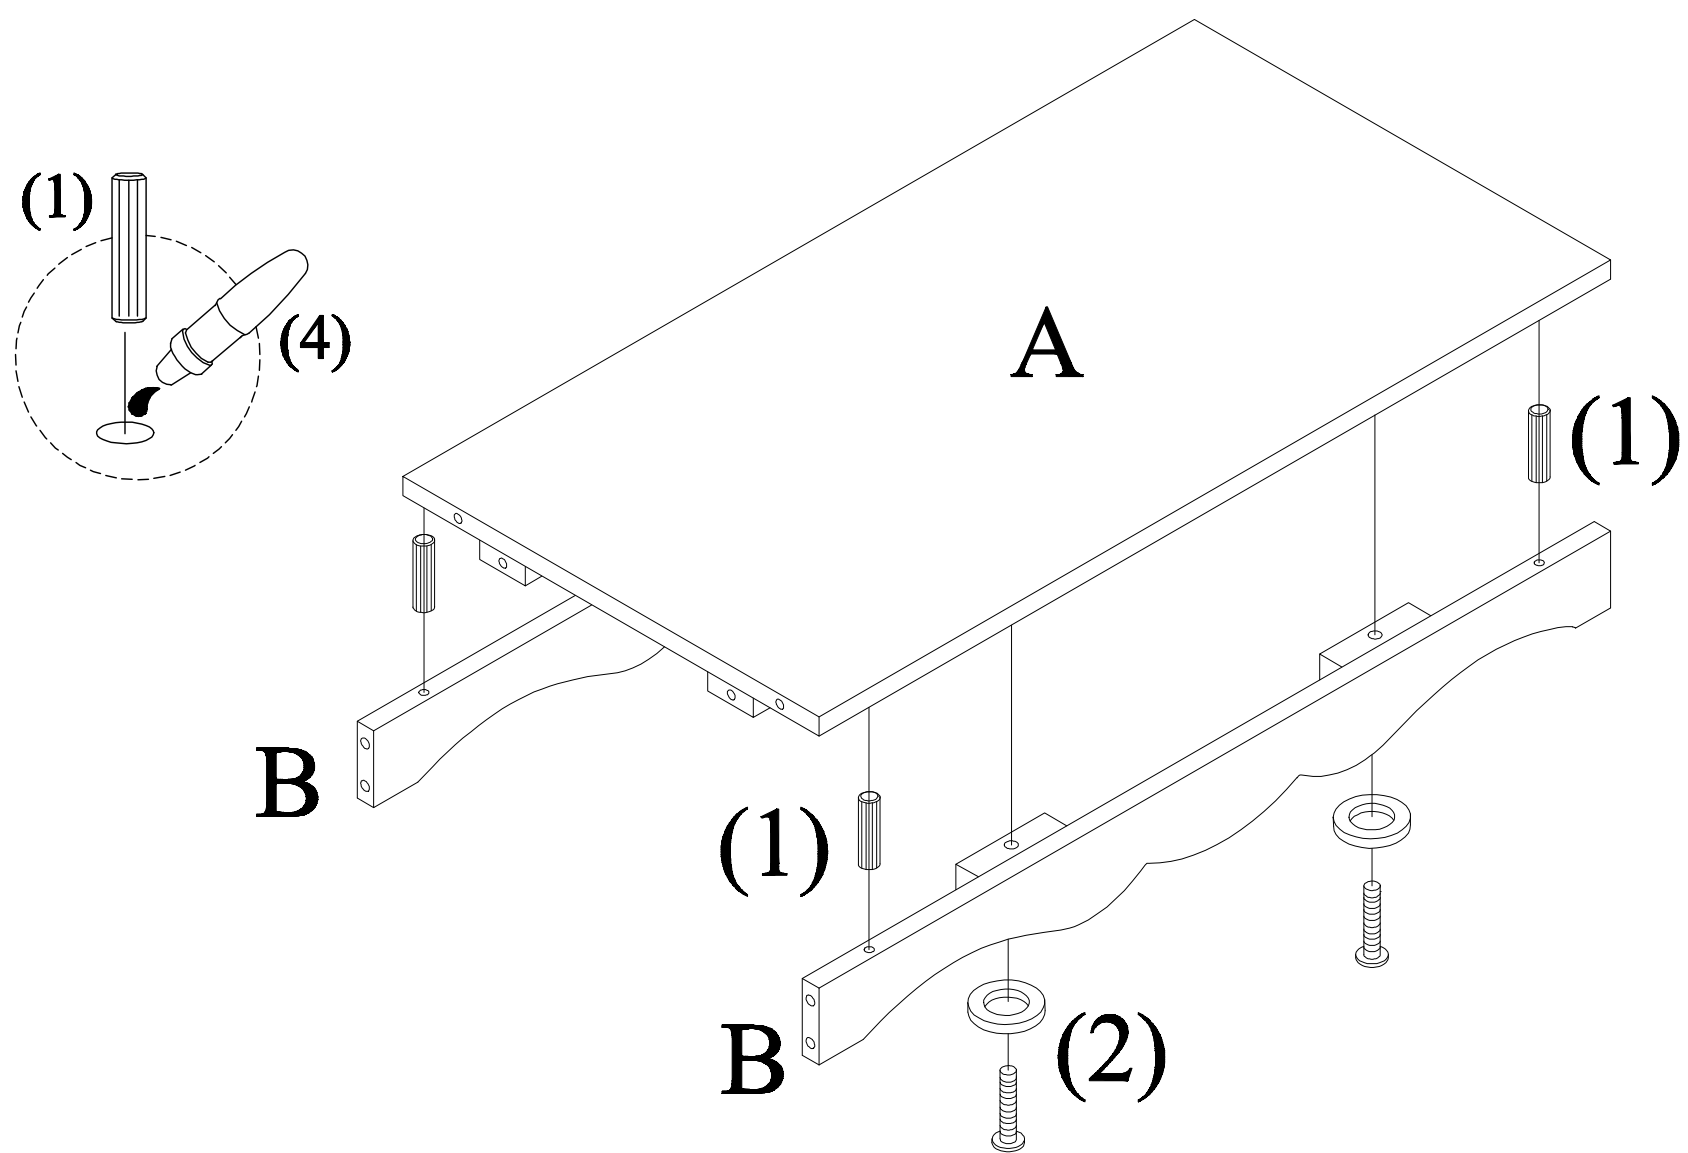

**STEP 2: ASSEMBLE SIDE FRAME (C & D) AND TABLE TOP (E)**

- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES AS SHOWN. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (2) TO ASSEMBLE SIDE FRAME (C & D), BOTTOM (A) AND TABLE TOP (E) TOGETHER.

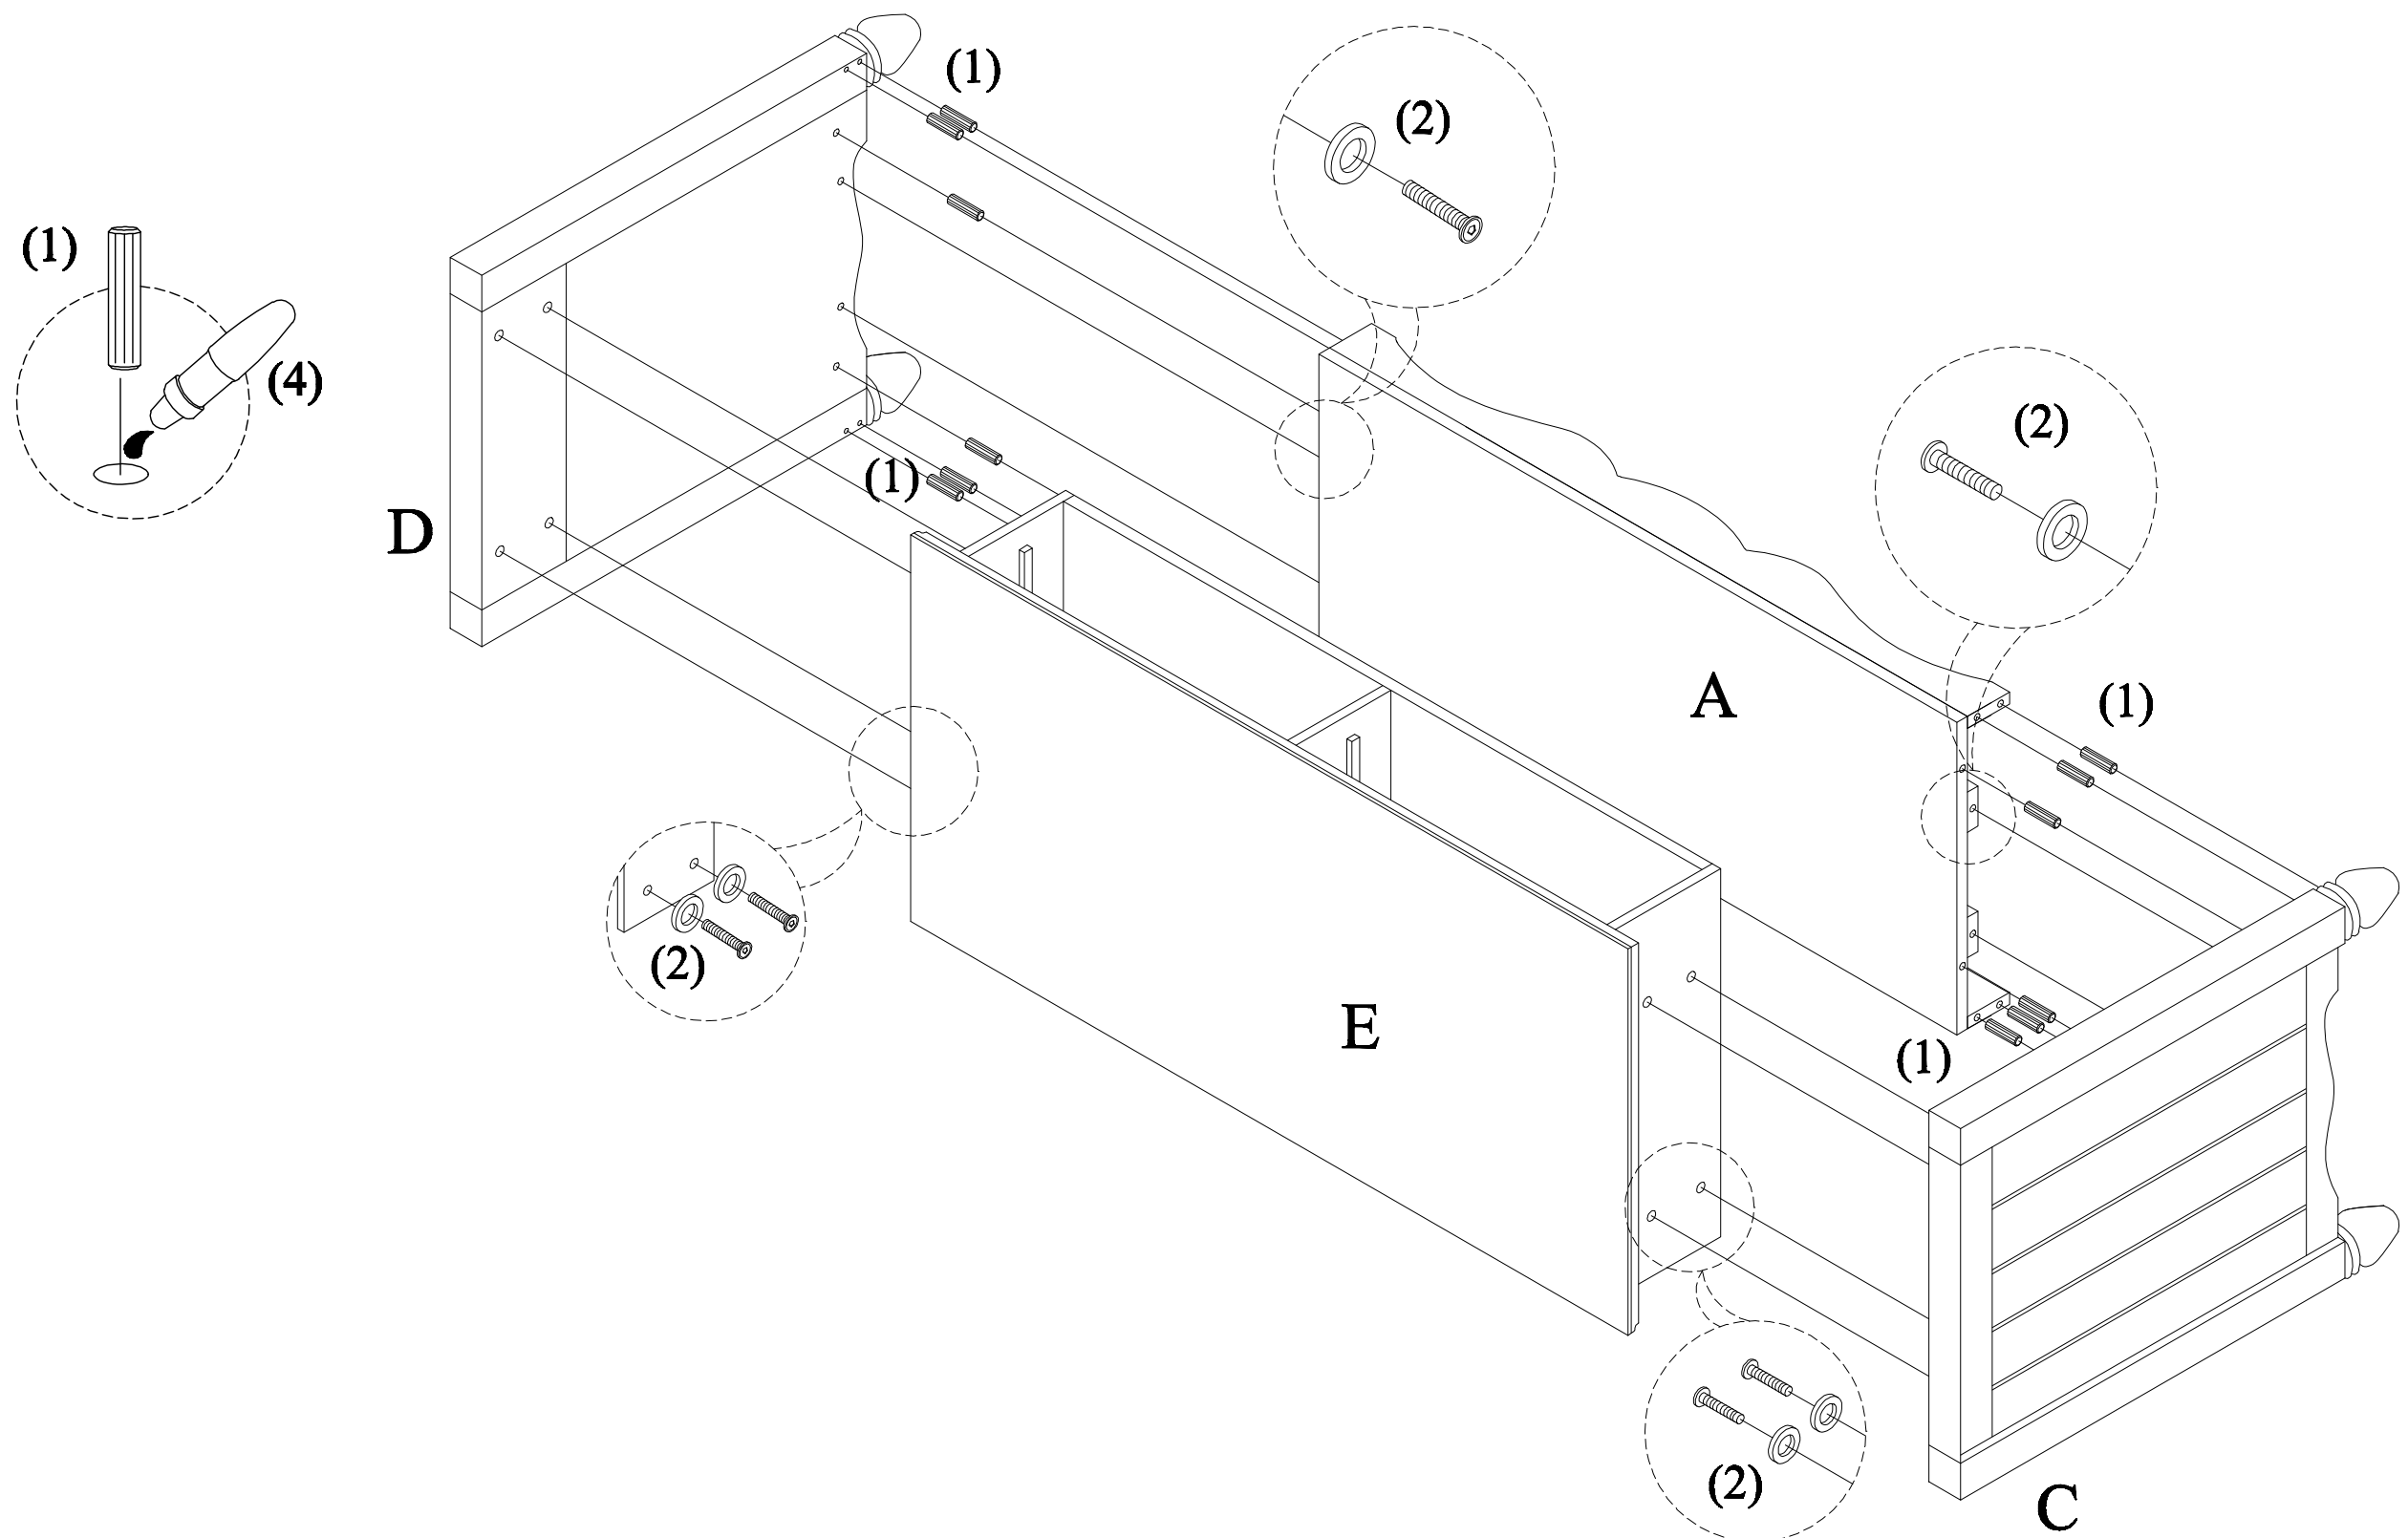

**STEP 3: PLACE DRAWER**

- PUT DRAWER INSIDE THE TABLE TOP (E).

